



User Guide

Welcome!

Thank you for choosing Brisa, your elegant e-paper weather frame.

Please take a few moments to read this guide.

It will help you set up your frame and understand how it works.

How to Set Up Brisa

1. First Time Setup

When you take Brisa out of the box, it will show this welcome screen:



To begin, press the small button on the back of the frame.

2. Connect and Configure

After pressing the button, Brisa will enter setup mode and show you instructions like this:



Follow these 2 simple steps:

Step 1: Connect to Brisa's Wi-Fi

- Use your phone to scan the QR code on screen
- or
- Go to your Wi-Fi settings and connect to the network named: **Brisa_WiFi**

Step 2: Open the Setup Page

- After connecting to Brisa_WiFi, scan the second QR code
- or
- Open your web browser and go to:
<http://192.168.4.1>

Note: Some phones may open this page automatically.

3. Set Your Preferences

On the configuration page:

- Select **your home Wi-Fi** network and enter its password
- Choose your **weather location** (by city or coordinates)
- Pick a **visual template** from many available designs
- Set your **language**
- Choose **imperial or metric** units
- Choose **12h or 24h** time format
- Select your **date format**

Tap **Save & Exit** when done.

Brisa will now try to connect to the internet and download the weather.

Understanding Brisa's Display

Brisa uses an **e-paper display** (also known as e-ink), similar to what you find in e-book readers like Kindle.

This screen has some unique characteristics:

- It updates **slowly** - a refresh may take 5-10 seconds and cause a brief **black and white flicker**.

This is completely normal and part of how e-paper works.

- **Weather updates automatically once per hour** and take around **30 seconds** to complete.

- You can also **refresh manually** by pressing the button on the back. This also takes about 30 seconds.

Why This Display Is Special

The e-paper screen is not just a technical feature - it's part of what makes Brisa a calming, elegant experience:

- **No glare, no backlight, no eye strain** - it's as gentle on your eyes as reading ink on paper.

- **No glow** - unlike phone or tablet screens, Brisa doesn't shine or flicker.

- It looks like a **beautiful printed illustration**, not a gadget.

- It's **quiet, slow, non-intrusive**, and designed to blend into your home - not distract from it.

- It fits the philosophy of **calm technology**: giving you useful information at a glance, without demanding your attention.

This display was chosen so that Brisa can become a peaceful, helpful part of your space - not another bright screen in your life.

Troubleshooting

No Wi-Fi Connection

If Brisa can't connect to your Wi-Fi (e.g. wrong password), it will show this screen:

Press the button on the back to re-enter setup mode and check your settings.

Weather Update Failed

If Brisa can't fetch the weather (e.g. wrong location), you'll see:

Press the back button to enter setup and correct the location or other settings.

If the issue persists, please contact us at:
support@brisaframe.com

Low Battery

If the battery gets too low, this screen will appear:



Connect Brisa to any USB-C charger.

Note: Brisa does **not** show that it's charging, but it is.

Charging takes 1 to 2 hours.

Extra Tips

- To enter setup mode manually, **press and hold the back button for 3 seconds.**
- To **reset Brisa to factory settings**, press and hold the button for **over 10 seconds.**
- A full battery lasts **from one to several months**, depending on how often settings are changed or weather is refreshed.

Contact

Please contact support@brisaframe.com at any time with questions and comments.

