



User Guide

Welcome!

Thank you for choosing Brisa Daylo, your calm e-paper frame.

Please take a few moments to read this guide. It will help you set up your frame, understand how it works, and use the buttons with confidence.

How to Set Up Brisa Daylo

1. First Time Setup


When you take Brisa Daylo out of the box, it will show this welcome screen:



To begin, press the  config button on the back of the frame.

2. Connect and Configure

After pressing the config button, Brisa Daylo will enter config mode and show instructions like this:

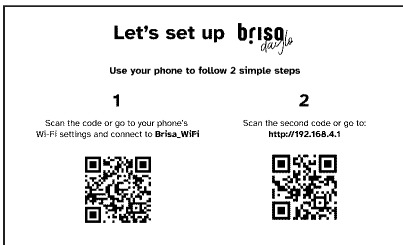

Follow these 2 simple steps:

Step 1: Connect to Brisa's Wi-Fi

- Scan the first QR code on screen with your phone, or
- open Wi-Fi settings and connect to **Brisa_WiFi**.

Step 2: Open the Setup Page

- Scan the second QR code, or
- open your web browser and go to: **http://192.168.4.1**

Some phones may open this page automatically after connecting to Brisa_WiFi.

3. Set Your Preferences

On the configuration page:

- select your home Wi-Fi and enter its password,
- choose location, language, units, time and date format,
- choose a **template**,
- optionally add finance or calendar options.

Tap **Save & Exit** when done. Brisa Daylo will connect to the internet and download its first data.

Understanding the Display

Brisa Daylo uses an **e-paper display**, also known as e-ink. It is similar to what you find in e-book readers.

This screen has some unique characteristics:

- It updates slowly. A refresh may take 5-10 seconds and cause a brief black and white flicker. This is normal.
- Data updates automatically. Weather usually refreshes once per hour.
- You can refresh manually with the **reset button**. The refresh may take about 30 seconds.

Why This Display Is Special

- No glare, no backlight, no eye strain.
- No glow like a phone or tablet screen.
- It looks like a printed illustration, not another bright gadget.
- It is quiet, slow and designed to blend into your home.

Brisa Daylo was designed as calm technology: useful information at a glance, without demanding your attention.

Troubleshooting

No Wi-Fi Connection

If Brisa Daylo cannot connect to your Wi-Fi, for example after a wrong password, it will show this screen:



Hold the  config button for 3 seconds to re-enter config mode and check your Wi-Fi settings.

Update Failed

If Brisa Daylo cannot fetch data, for example because the location or settings are incorrect, it will show this screen:




Enter config mode and correct the location, template, finance, calendar or other settings.

Battery and Extra Tips

Low Battery

If the battery gets too low, this screen will appear:

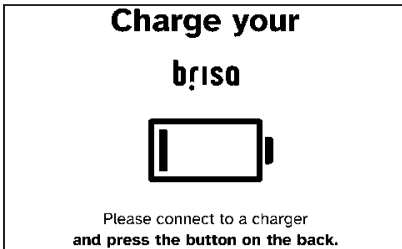

Connect Brisa Daylo to any USB-C charger.

Note: Brisa Daylo does not show that it is charging, but it is. Charging takes about **1 to 2 hours**.

Extra Tips

- To enter config mode manually, hold the config button for **3 seconds**.
- To reset Brisa Daylo to factory settings, hold the config button for **10 seconds**.
- A full battery lasts from one to several months, depending on update frequency and usage.

Contact

Please contact **support@brisaframe.com** at any time with questions and comments.



Buttons



Reset: refreshes the screen.



Config: tap switches between selected playlist templates. Hold 3 seconds for config mode. Hold 10 seconds for factory reset.